

Quick Start Guide

Power on

Long press for 3 seconds to power on/off.




Charge

When the battery level of the robot is lower than 10%, please connect the charger in time.



Delivery

Click on the target table number on the Delivery Mode menu and click "Start".

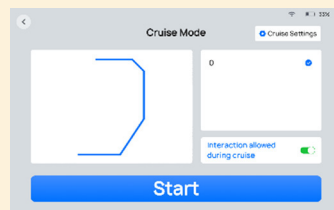


Cruise

Select the cruise route in Cruise Mode and click "Start".




Customer Attraction

Select the Customer Attraction Mode then click "Start", the robot will go to the defined location to attract customers by itself.

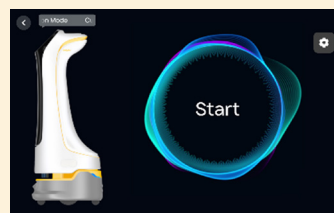

Escorting

Select the table number in Escorting Mode menu, and the robot may lead the customers to the table.

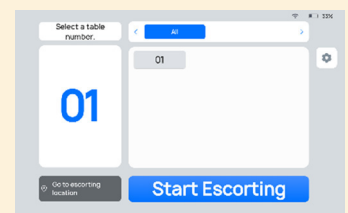


Dish-Return

In Dish-Return Mode, select the table number and click "Start". The Dwell Time and Return Interval can be defined in the settings.



Self-Charging

Click "Charging", the robot will automatically head to the charging pile for charging. (A charging pile is required)

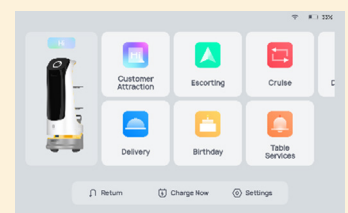

Note

1. Press the Emergency Button on the top of the robot to make it stop immediately. Then it cannot move and the button needs to be rotated to make it move again.
2. Do not deliver liquid dishes, such as soup or hot pot, which may spill on the trays and cause other accidents.
3. The robot has an automatic obstacle avoidance function, but it is strictly forbidden to block the robot suddenly during its running. Otherwise, it may cause an accident.
4. Please designate a person to charge the robot, do not leave it charging unattended.
5. Please keep the robot and its charging port in dry environment and at room temperature.
6. Do not place the robot and charger in high-temperature environment for charging (>40°C) or let water in.